

# PERISTALTIC PUMP MP1 SPEEDY REDOX

Data  
Sheet

## DESCRIPTION

- ✓ Peristaltic pump with built in REDOX/ORP controller
- ✓ Suitable to dose oxidizing chemicals
- ✓ Set Point easy calibration between 300-800 mV interval
- ✓ Semi-automatic calibration with buffer 468 mV
- ✓ Set Point proportional dosage
- ✓ ON/OFF function
- ✓ Reinforced PP body
- ✓ Polycarbonate front panel
- ✓ IP 55 Protection Degree
- ✓ Standard Power Supply 230 Vac
- ✓ 100% Made in Italy
- ✓ CE approved

## OPTIONAL

- ✓ SCHUKO plug
- ✓ ON / OFF switch





DESCRIPTION		
	Standard Material	Upon Request
<b>Standard Version</b>		
Box	PP	-----
Roller	DELRIN	-----
Tube	Santoprene	-----
Power Supply	230 V 50 – 60 Hz	-----
Consumption	35 Watt	-----
Net Weight	0,5 kg.	-----
Ring Nuts	PP 1/8"	-----
Fittings	PP 4 x 6 mm	-----
Probe Connection	BNC	-----

# PERISTALTIC PUMP MP1 SPEEDY REDOX

Data  
Sheet

## TECHNICAL SPECIFICATIONS

Standard	Max l/h	Pressure		Max cc / min	Tube Santoprene	Box	Power [Watt]	RPM	Weight	
		Bar	PSI						kg.	Lbs
1,8 - 01	1,8	01	14,7	30	4 x 7	PP	35	10	0,5	1,2

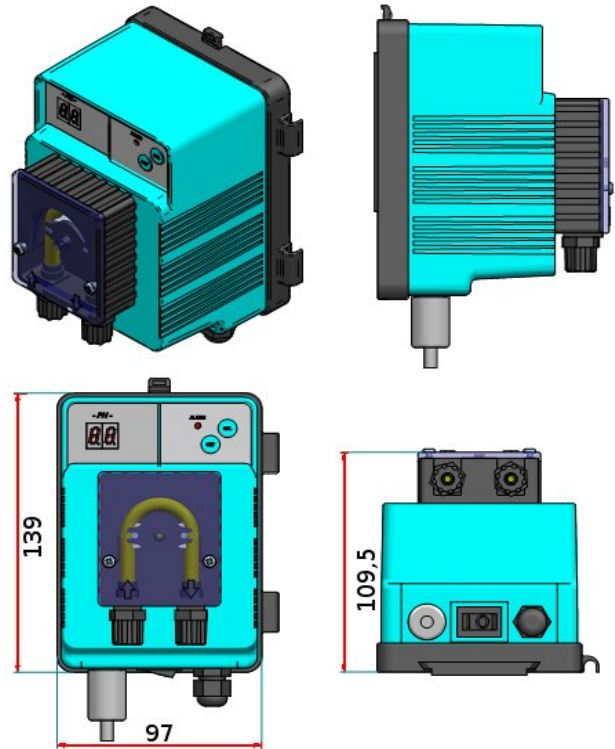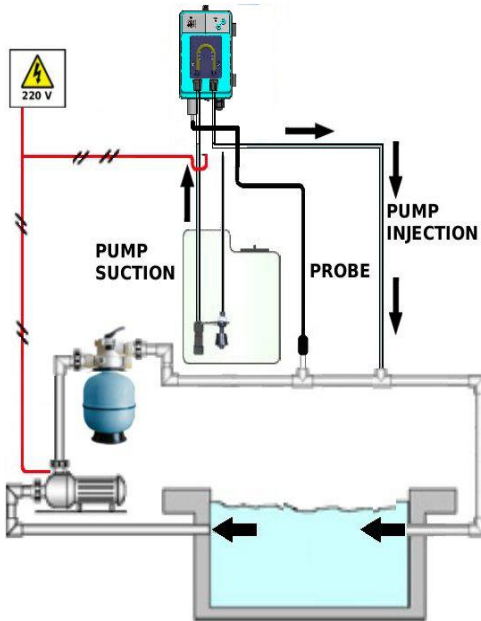

## ACCESSORIES KIT

	Injection Valve 1/2" PP-VL-VT	PP Foot filter with lip valve	Delivery tube 2mt PE 4x6	Suction tube 2mt PVC 4x6	Bleed tube 1,5mt PVC 4x6	REDOX electrode 3 mt. Cable epoxy body	468 mV buffer solution	Nr. 2 saddle clamps d.50 1/2"	1/2" PP probe holder
<b>STANDARD KIT</b>									